

Technical Bulletin


Date Released: 08-04-2011 **Tracking Number:** TBACTH-002

Model / Part Number: ACTH / ACTH11


Re: Fahrenheit or Celsius

Details: The default temperature scale of the ACTH & ACTH11 is Fahrenheit. If the thermostat's set point and room temp both show excessively low numbers, the thermostat may be in Celsius mode.

Inspect the (4) DIP switches inside the wall thermostat. DIP switch #2 should be set to ON (up position) for Fahrenheit. If it is set to OFF (down position), thermostat is set for Celsius. Move switch to ON position and replace cover.

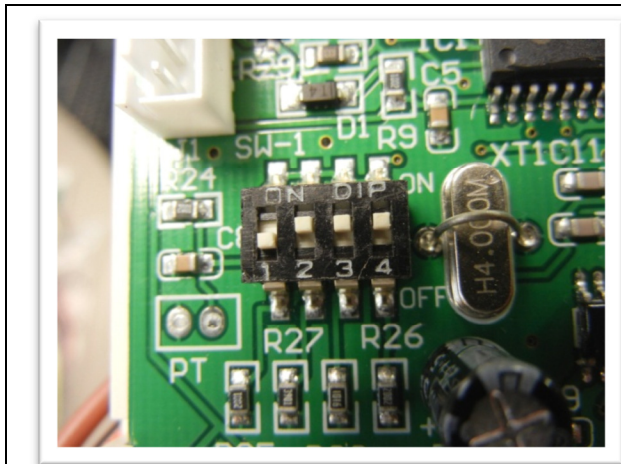

Default DIP settings.

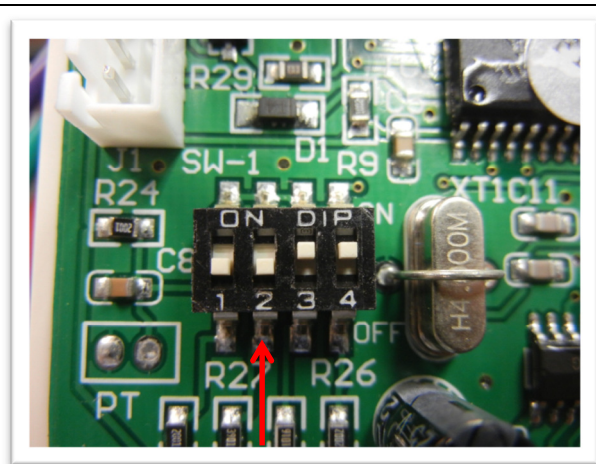

Incorrect setting of DIP switch #2